






SUNDAY HOSPITALITY

Dishwasher Set-Up

<u>IMPORTANT STEPS</u>	<u>KEY POINTS</u>
 <p>Insert Strainer</p>	<ul style="list-style-type: none"> • Insert <i>strainer</i> into hole inside dishwasher and turn until top of strainer is flush with bottom of dishwasher • Close the door
 <p>Turn on <i>Master</i> & <i>Wash</i> Switches</p>	<ul style="list-style-type: none"> • Put both <i>Master</i> and <i>Wash</i> toggle switches in up position • (Position of other toggle switches is unimportant at this time)
 <p>Fill Dishwasher and add Soap</p>	<ul style="list-style-type: none"> • Turn on <i>Circuit breaker</i> (up position) • <i>Immediately</i> hold <i>rinse & fill</i> switch in the up position to fill dishwasher – hold up for approximately 30 seconds • Open dishwasher door to see if water is up to top of strainer, <i>if not</i>, close door and hold <i>rinse & fill</i> switch up again until filled • Open door and add 1 scoop of detergent (this is enough for both masses) • Note: If Control Panel Power Light does not turn on when the Circuit Breaker and Master Switches are turned on, power to dishwasher may be off. This circuit breaker is in the furnace room. Ask a staff member for the key and location of circuit breaker.

SUNDAY HOSPITALITY

Dishwasher Operation

<u>IMPORTANT STEPS</u>	<u>KEY POINTS</u>
 <p data-bbox="233 575 435 617">Load Cups</p>	<ul data-bbox="565 310 1409 596" style="list-style-type: none">● Rinse lipstick and inside of cups in sink beside dishwasher● Load cups in <i>green racks</i> only 1 layer deep● Slide rack into dishwasher and close doors
 <p data-bbox="358 961 483 1024">Start</p> <p data-bbox="282 1066 391 1108">Wash</p>	<ul data-bbox="565 638 1458 1163" style="list-style-type: none">● Flip <i>Start</i> switch to either up or down position. This starts a wash/rinse cycle● When cycle is complete (approximately 1 min.), open doors and remove rack.● Slide in another loaded rack, close doors, and flip <i>start</i> switch to opposite position (either up or down)● Repeat process until all dishes are washed
<p data-bbox="228 1472 440 1562">Dishwasher Shut Down</p>	<ul data-bbox="565 1184 1474 1806" style="list-style-type: none">● Turn off <i>Master</i> switch (down position)● Turn off <i>Circuit Breaker</i> on side of control panel (down position)● Remove <i>strainer</i> (use hook hanging on conduit behind dishwasher)● Let drain completely● With a dry rag: wipe all excess water from bottom of tub● Note: Tub must be completely dry